


# CARTER BB TYPE



PARTS LIST SHOWN DOES NOT  
REFLECT THE CONTENTS  
OF THE KIT.

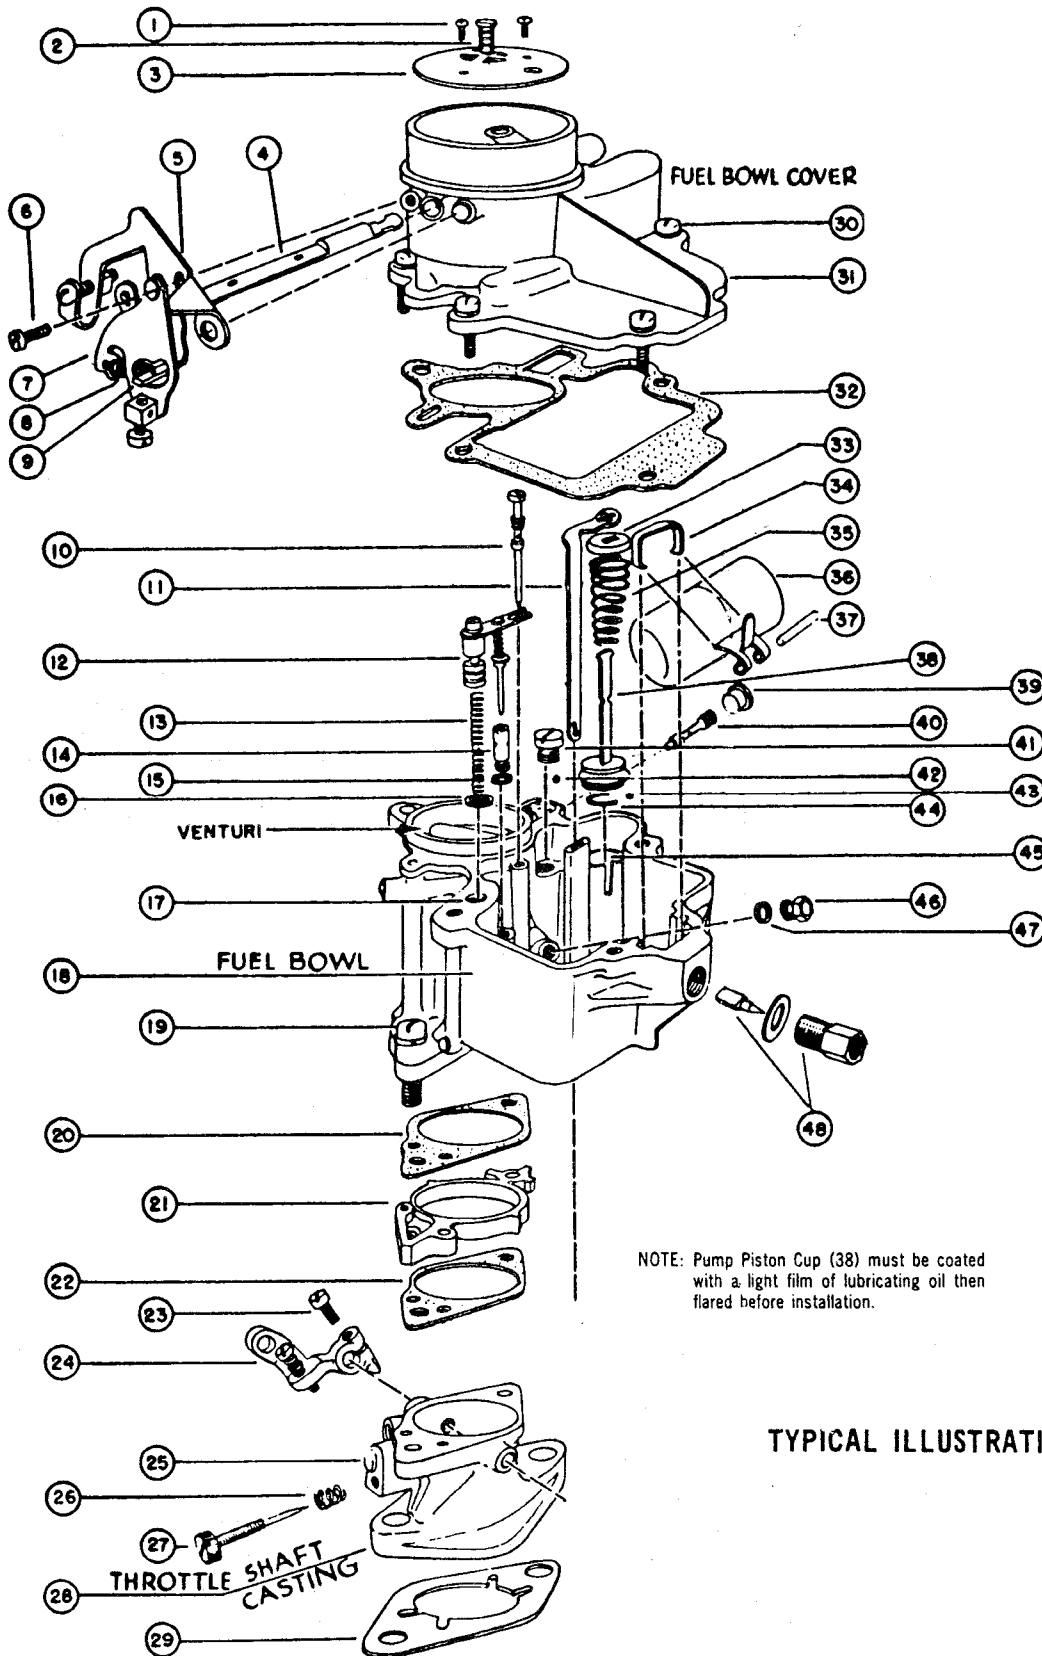

NOTE: Pump Piston Cup (38) must be coated  
with a light film of lubricating oil then  
flared before installation.

## NO. PART

- 1 SCREW
- 2 AIR VALVE
- 3 CHOKE VALVE
- 4 CHOKE SHAFT
- 5 CHOKE TUBE
- 6 CHOKE SCREW
- 7 PIVOT
- 8 CHOKE LEVER SPRING
- 9 LIP
- 10 LOW SPEED JET
- 11 PUMP PISTON LIFTER
- 12 VACUUM PISTON
- 13 VACUUM PISTON SPRING
- 14 POWER JET
- 15 GASKET
- 16 GASKET
- 17 CYLINDER
- 18 FUEL BOWL
- 19 FLANGE SCREWS
- 20 FLANGE GASKET
- 21 INSULATOR
- 22 FLANGE GASKET
- 23 CONTROL ROD SCREW
- 24 CONTROL ROD
- 25 IDLE PASSAGE PLUG
- 26 SPRING
- 27 IDLE ADJUST SCREW
- 28 THROTTLE SHAFT CASTING
- 29
- 30 FUEL BOWL SCREWS
- 31 FUEL BOWL COVER
- 32 FUEL BOWL GASKET
- 33 RETAINER
- 34 RETAINER
- 35 PUMP SPRING
- 36 FLOAT
- 37 FLOAT PIN
- 38 PUMP PISTON
- 39 RIVET PLUG
- 40 PUMP JET
- 41 PUMP CHECK PLUG
- 42 PUMP CHECK BALL
- 43 PUMP INTAKE BALL
- 44 RETAINER RING
- 45 PUMP CYLINDER
- 46 JET
- 47 GASKET
- 48 NEEDLE & SEAT

TYPICAL ILLUSTRATION